

# ASSEMBLY GUIDE

## SHORT HEIGHT - LARDER/BROOM CUBOARD

### REQUIRED TOOLS:

Cross Head Screw Driver  
Drill & Drill Bits  
Hammer  
Spirit Level  
PVA Wood Glue  
Pliers

### REQUIRED COMPONENTS:


20x Wooden Dowels	4x Leg Sockets
12x Metal Dowels	4x Legs
6x Shelves	
24x Shelf Brackets	
8x Roundhead Screw for Legs (2per leg)	
8x Roundhead Screw for the back panel	

### WARNING

This product should be assembled by a competent individual and according to the above instructions only. Failure to correctly install the product could result in it being dangerous. Please ensure that all components are included and if not, or if you have any other questions, please contact us by sending an email to; [sales@tradekitchensforall.co.uk](mailto:sales@tradekitchensforall.co.uk)

This product may contain small parts and solvent, which should be kept out of the way of children at all times. Seek immediate medical attention if any solvent comes into contact with eyes or is swallowed.


1.

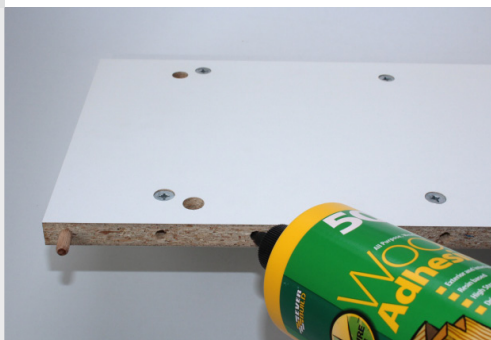

Before assembly place on a solid flat surface and make sure that you have all the correct tools.

Insert the wooden dowels into the holes provided in the sides of the bottom panel. Prior to inserting, apply a small amount of wood PVA glue in the hole.

2.

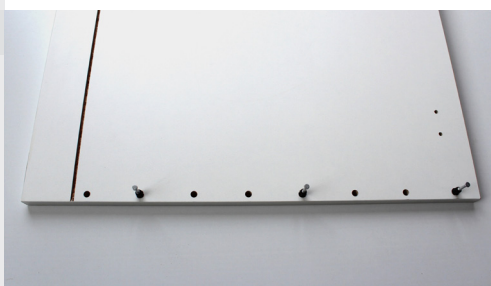

Proceed to insert the metal dowels into the holes on the side panels, as per drawing.